



Directions for Installation of Front Loading Hinged Filter Rack ECONAR Part Numbers 75-1184 and 75-1185

1. Install the water connections on the side of the heat pump. If the water connections are not made before the filter rack is installed, they may not be able to be installed with the filter rack in place.
2. If the heat pump does not have an existing filter rack in place, remove three of the four pan head screws that hold the air coil in place. Keep one screw in place to prevent the air coil from moving.
3. If the heat pump has an existing filter rack installed, remove it by unscrewing three of the four pan head screws that hold the filter rack in place. Partially loosen the fourth screw, so the existing filter rack can move. Replace one of the screws in order to hold the air coil in place. Remove the loosened screw, and the existing filter rack.
4. It may be desirable to weather-strip or caulk around the new filter rack, where it connects to the heat pump, in order to eliminate any air leakage.
5. Align the new filter rack with one of the open screw holes, and partially tighten the screw in place.
6. Remove the last screw from the air coil, and fully align the new filter rack with the remaining screw holes.
7. Install and tighten all screws.